 




Polaroid S10 volume button Replacement

This will replace the speaker and volume board replacement.

Written By: James

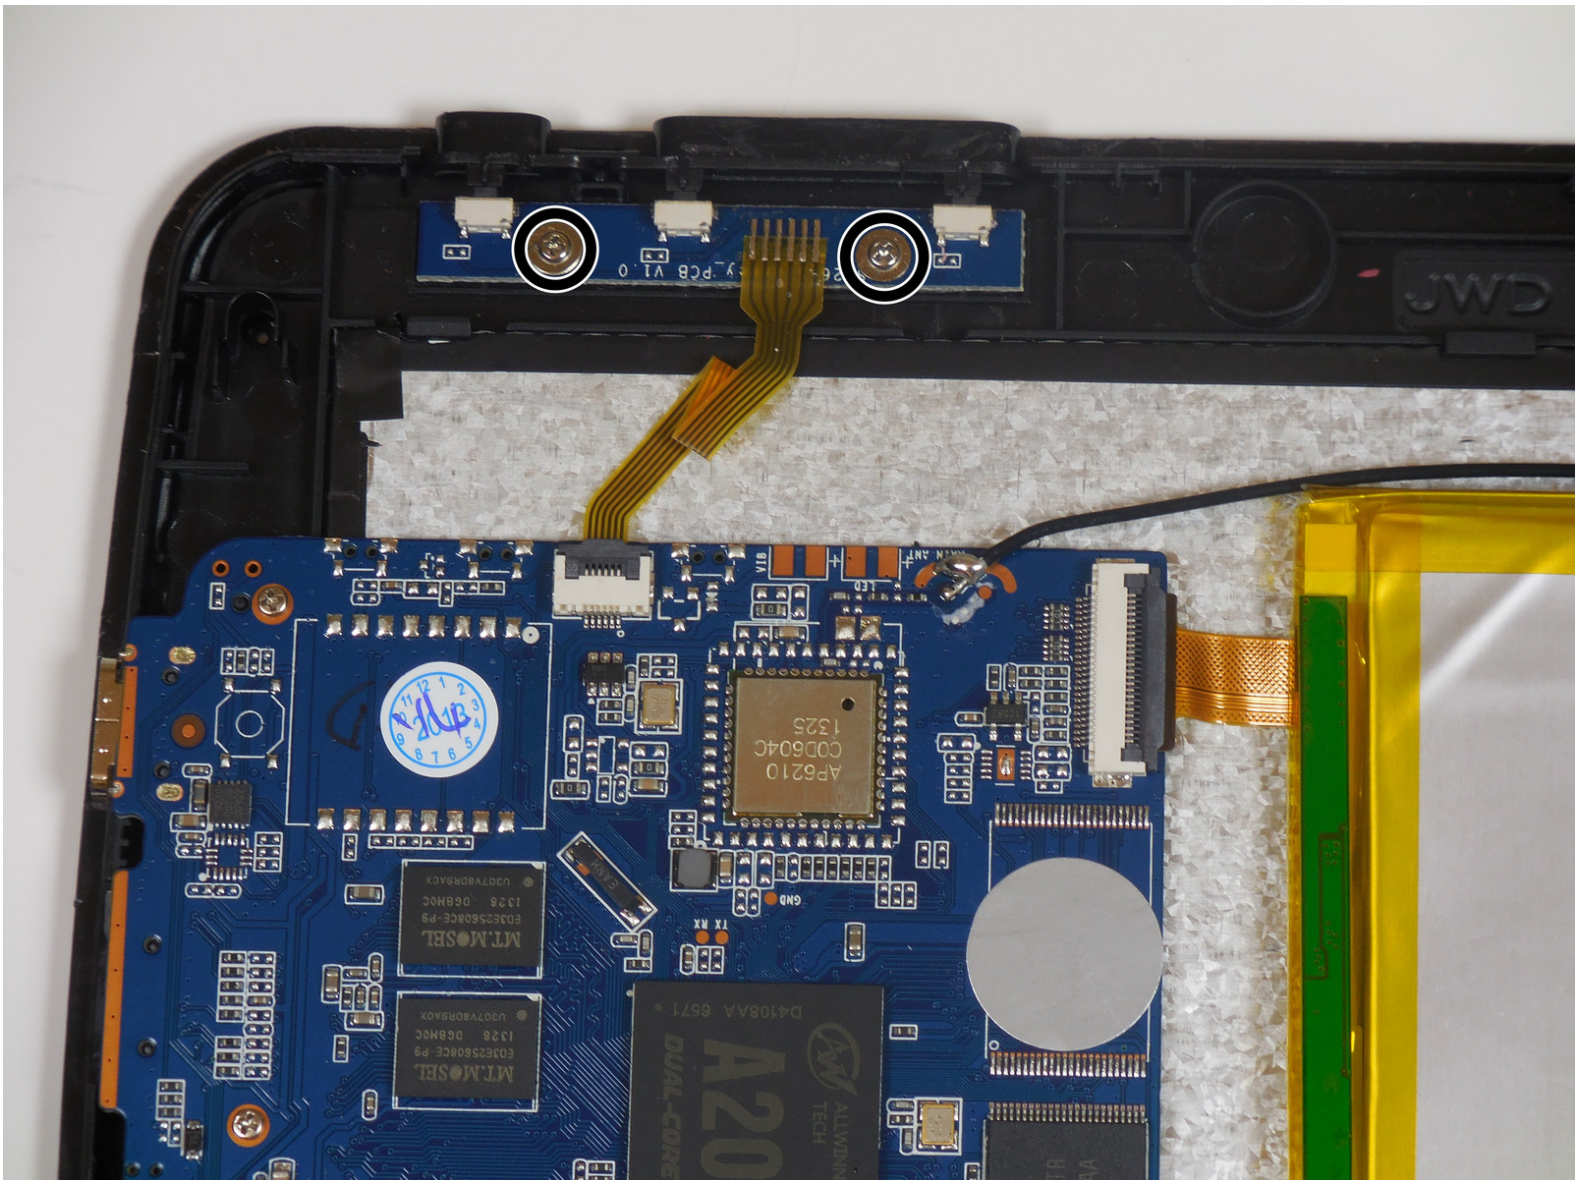



TOOLS:

 
 
- [iFixit Opening Picks set of 6](#) (1)
 - [Spudger](#) (1)
 - [64 Bit Driver Kit](#) (1)
 - [Metal Spudger Set](#) (1)
-

Step 1 — Removing the backcover



- Place an opening pick between the volume button and the back cover.
- ⓘ More than one pick may be needed but avoid placing more than two in the space.
- ⚠ Excessive force on the pick will break the volume button.
- Carefully use the metal spundger to remove the back cover.
- ⓘ A plastic snap noise is normal due to the tabs on the back cover.

Step 2 — Volume and Power Button Board

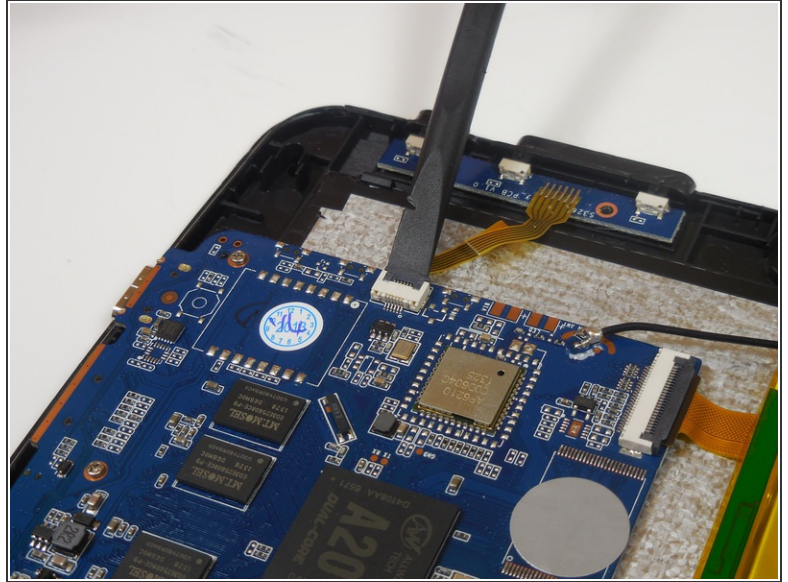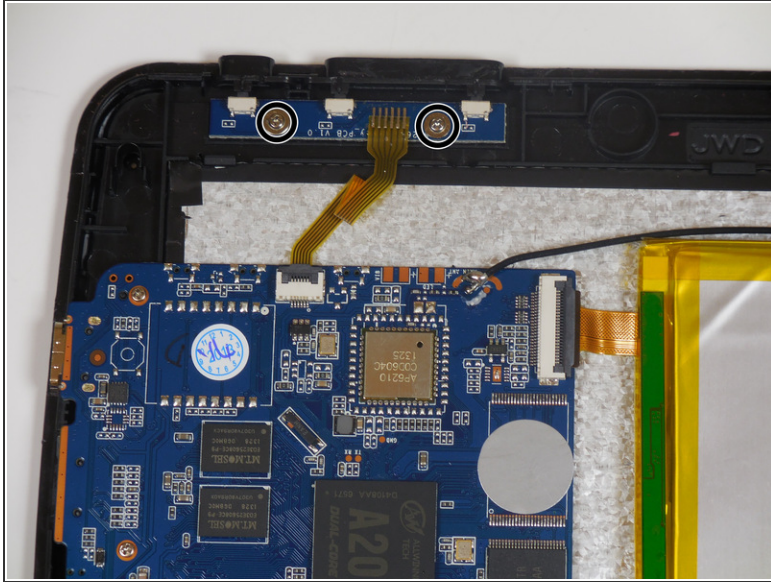

- Use the spudger to remove the tape.
- Remove the 2 J000 4 mm screws using a J000 screwdriver.
- Carefully disconnect the connector port.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-09-07 11:34:48 PM.